



Figure 1



Figure 2

**To Remove
the Cylinder Pin:**

1. Place the hammer in the half cock.
2. Pull the Cylinder Pin Block down.
3. Turn the Cylinder Pin Block 90 degrees (See Figure 2)
4. Slide the Cylinder Pin Block out of the gun in the direction of the muzzle end of the barrel.

**To Re-Install
the Cylinder Pin:**

1. Make sure the Cylinder Pin is turned (180 degrees) perpendicular to the Cylinder Pin Shaft (See Figure 2)
2. Slide the Cylinder Pin into the frame.
3. Pull down on the Cylinder Pin Block and Rotate 180 degrees or until it locks into the grooves under the barrel (See Figure 1)